



adjustable plaster ring 3.0

installation instruction

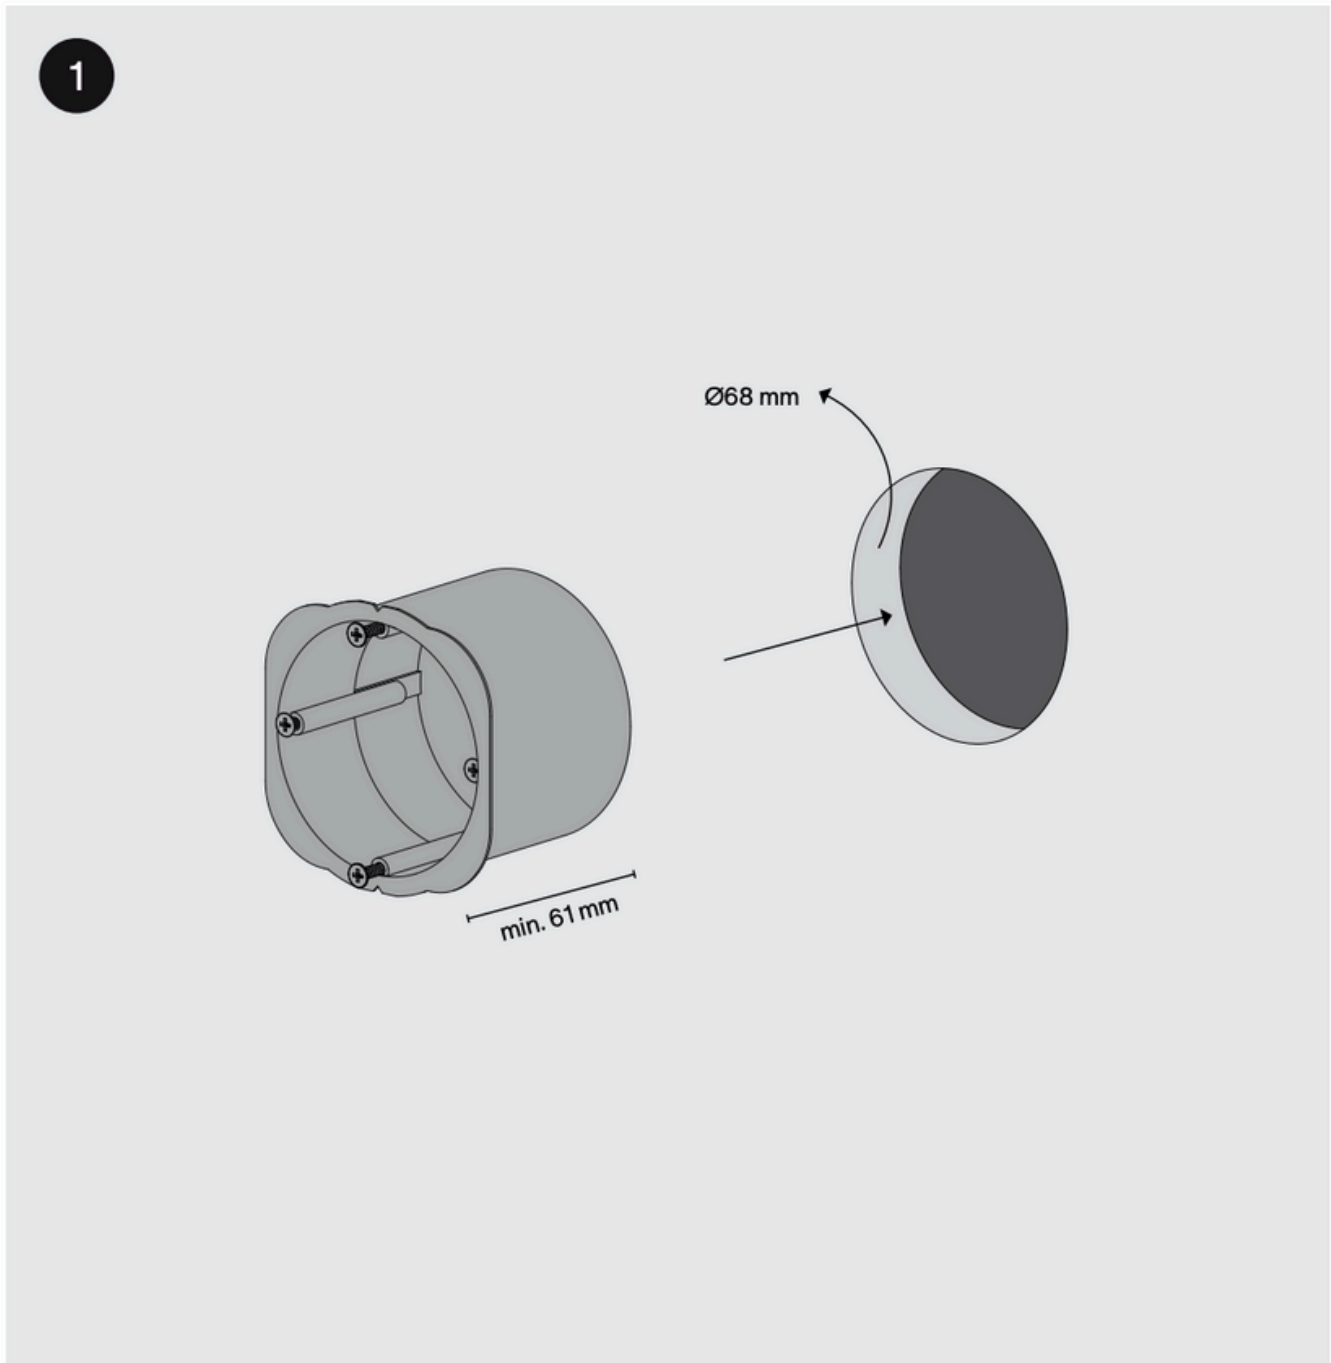


Drill a $\text{Ø}68$ mm hole and install the junction box in the wall.

or

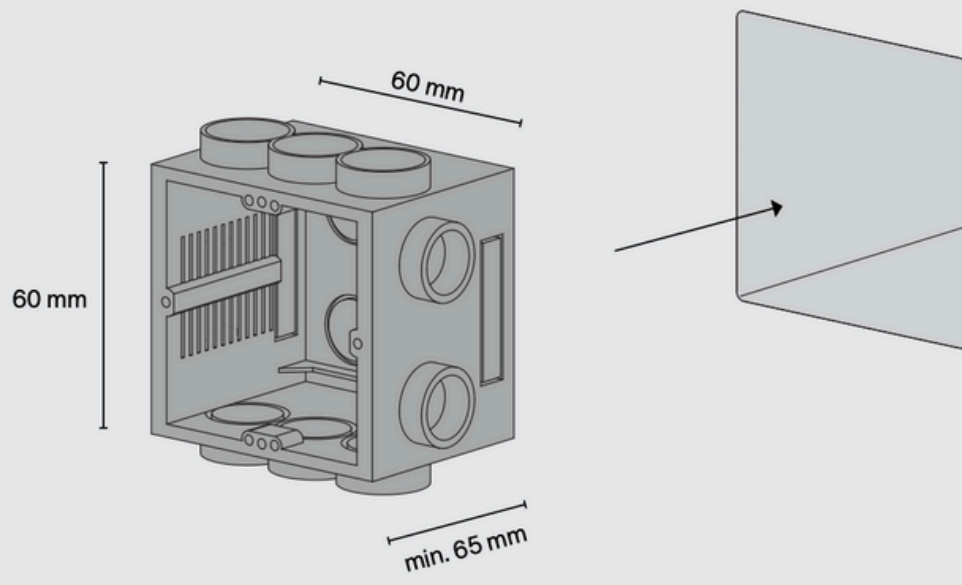


2

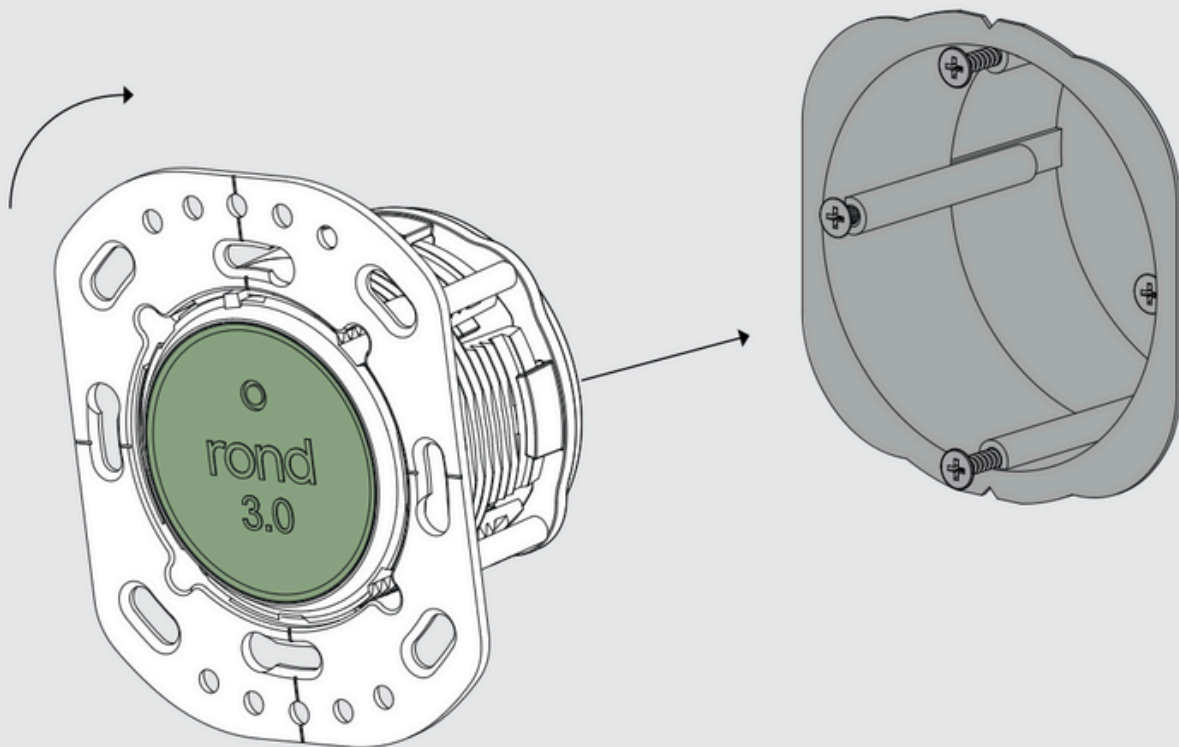


Insert the plaster ring in the junction box and give it a twist.

3

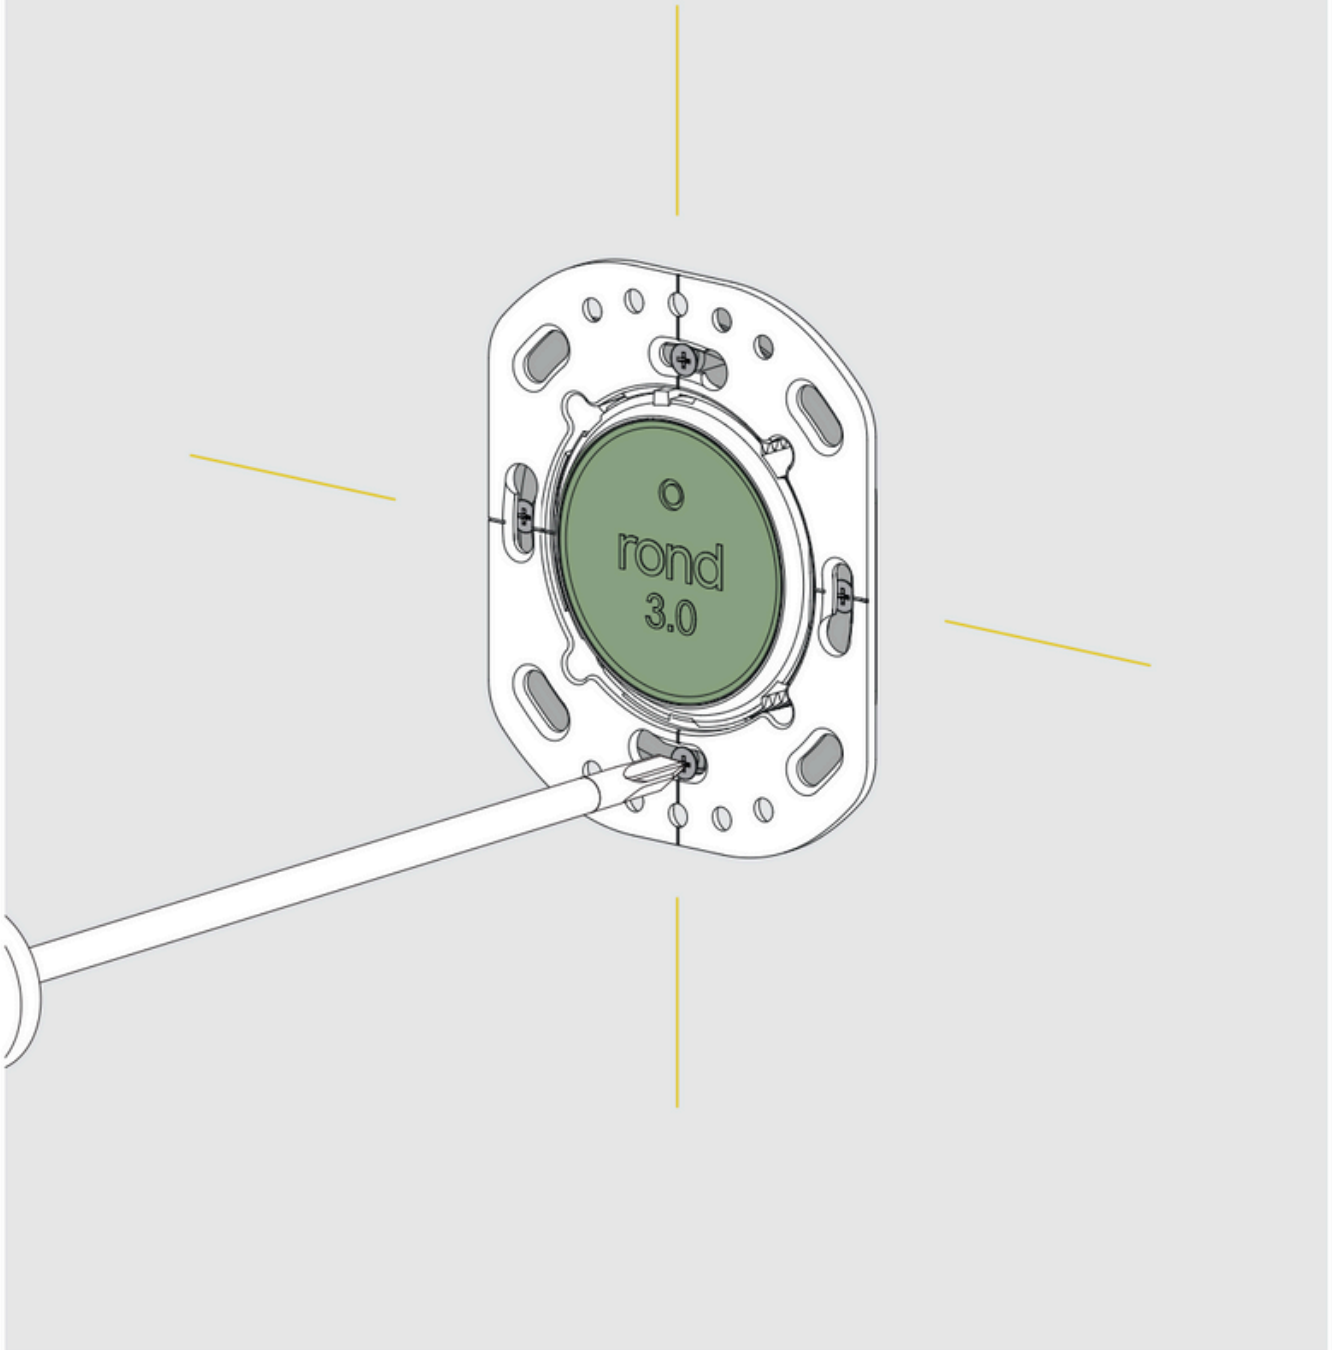


Level and secure the plaster ring to the junction box using the appropriate screws.

4

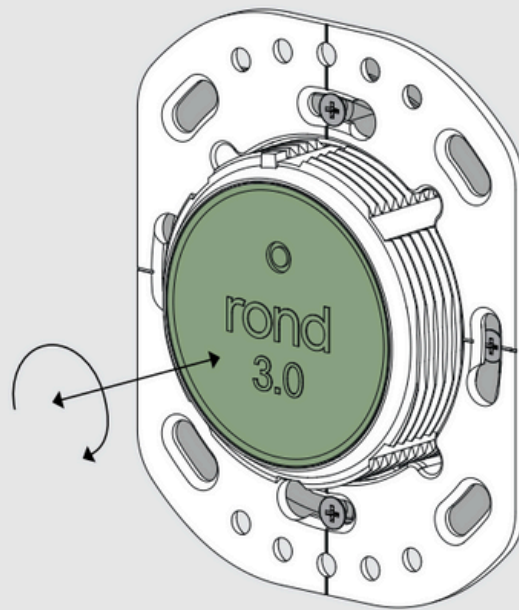


Remove the plaster lid and adjust the height of the ring to the desired plaster thickness by twisting the middle part.

5

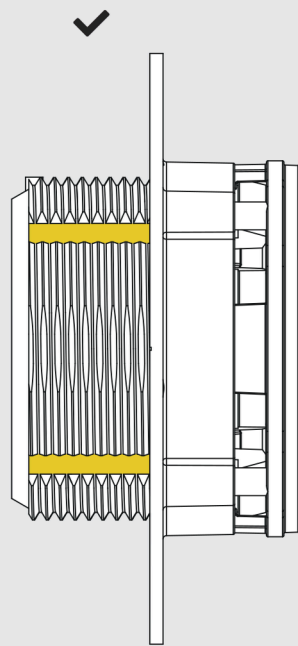


max. adjustability (20 mm)

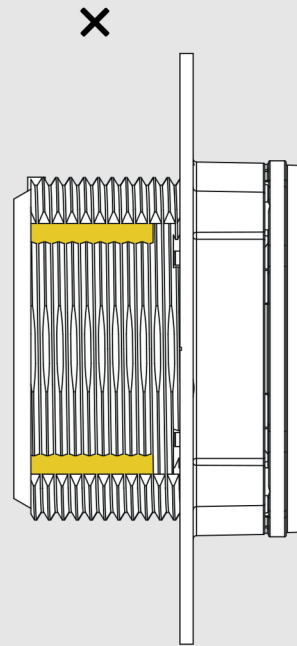

too high

Respect the min. (3.6 mm) and max. adjustability (20 mm) when adjusting the height.

6

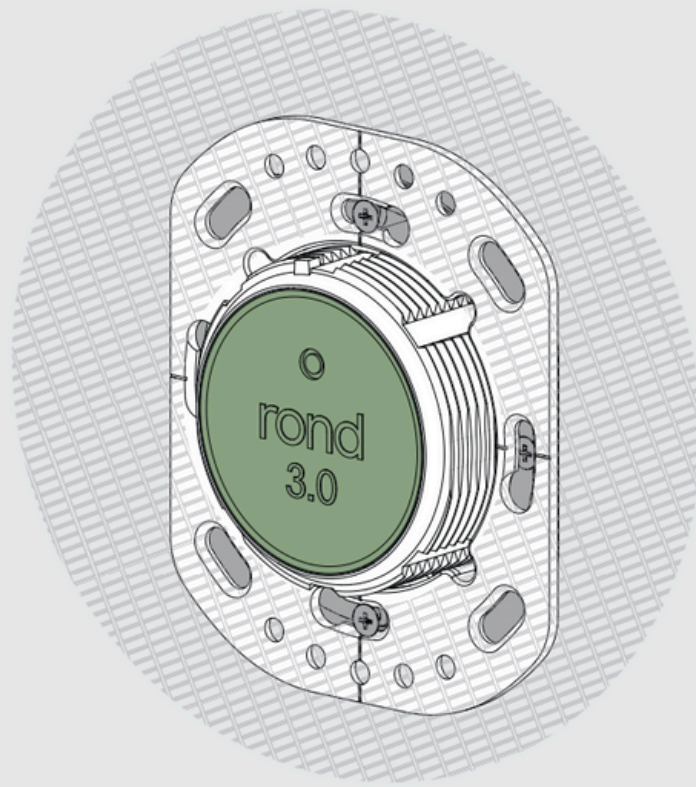


Use a fiberglass mesh tape for optimal plaster adhesion.

7




**Excercise caution while plastering, do not damage the ring.
Keep the plaster lid inside the mud ring while plastering.**


8

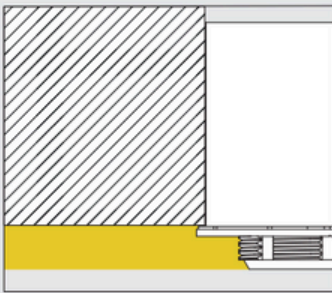

perfect amount of plaster ✓

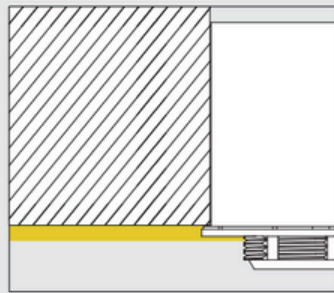

not enough plaster ✗

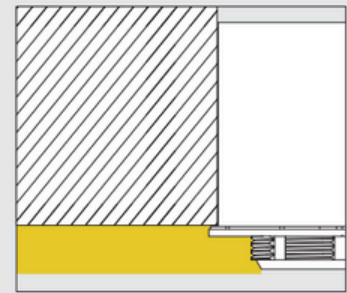

too much plaster ✗

Make sure not to touch the edge of the plate while sanding.



rond.io

Shiver NV - Handelsstraat 19 - 8630 Veurne - Belgium

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of unskilled personnel attempts to repair a product.