rond × DE Oude SCHAKELAAR

floor box Ø68

installation instruction

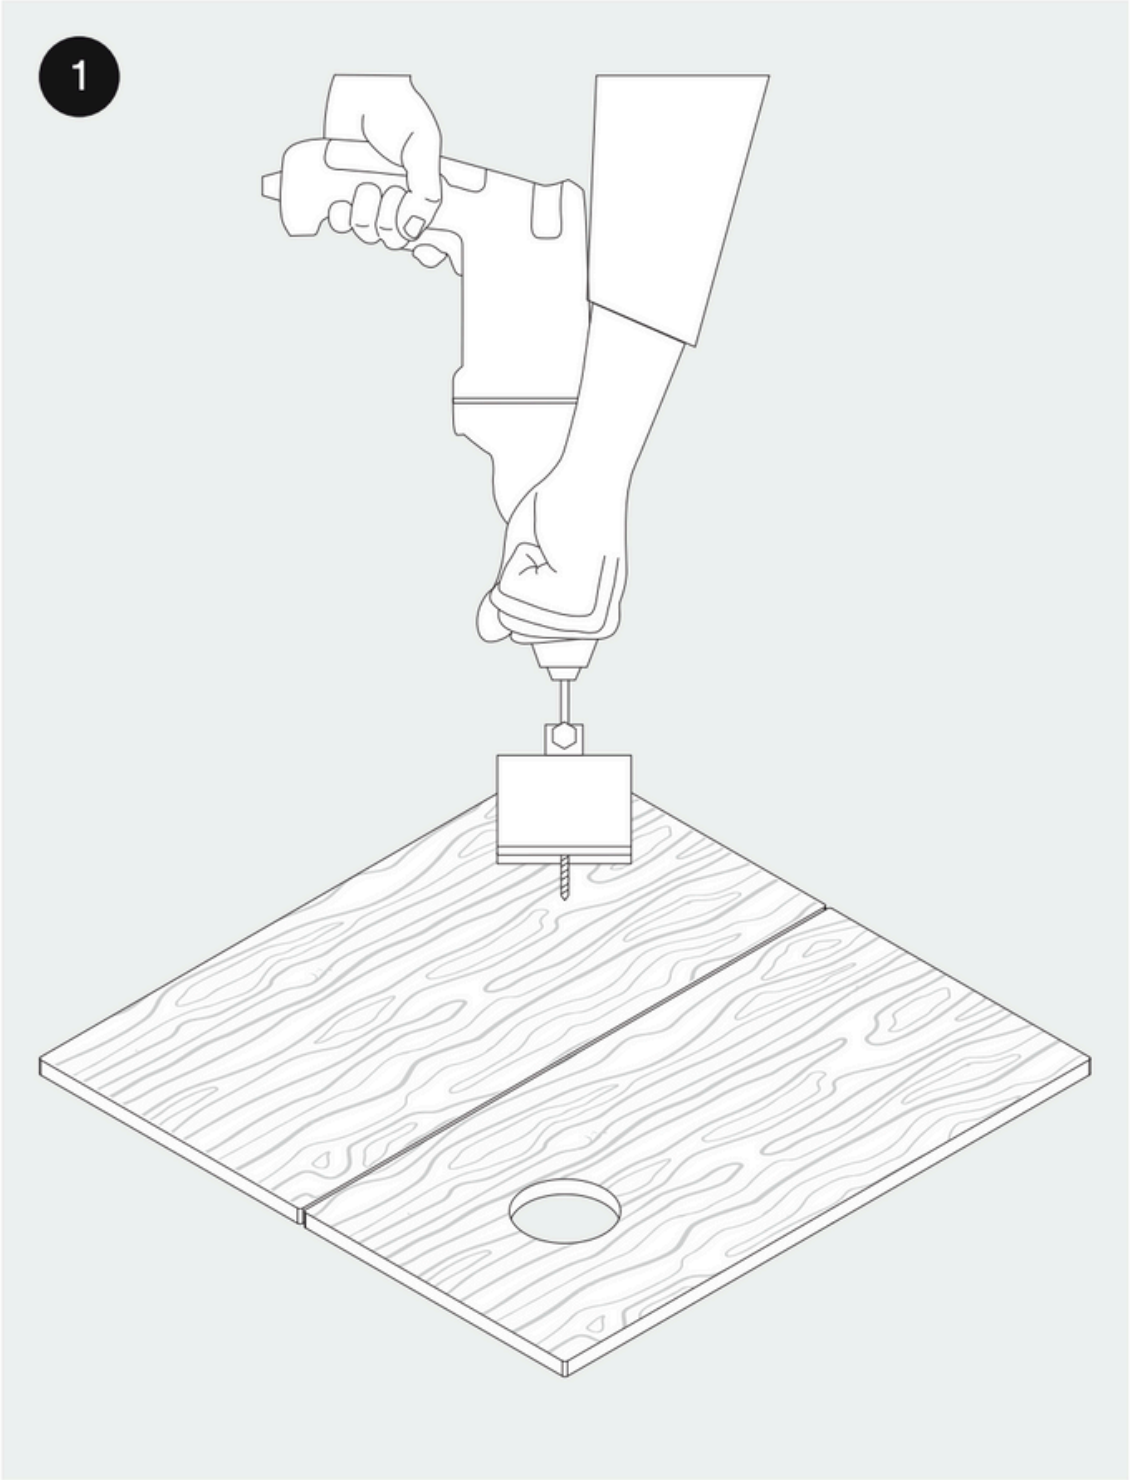

drill a Ø64 hole where the socket has to be located

flush mount countersink

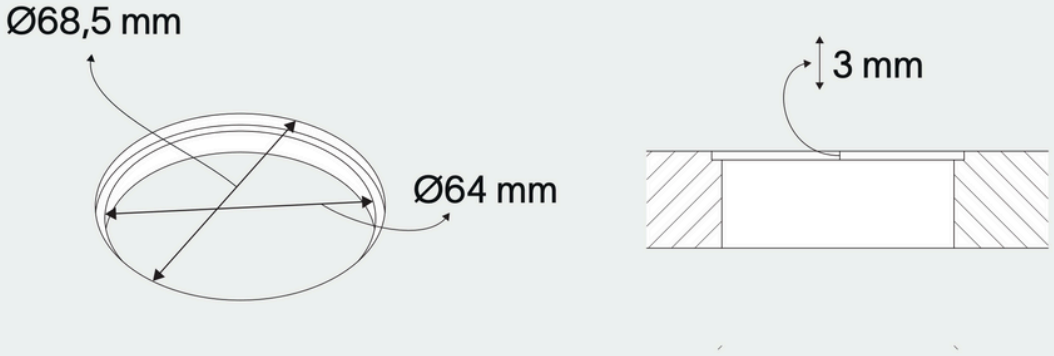

2

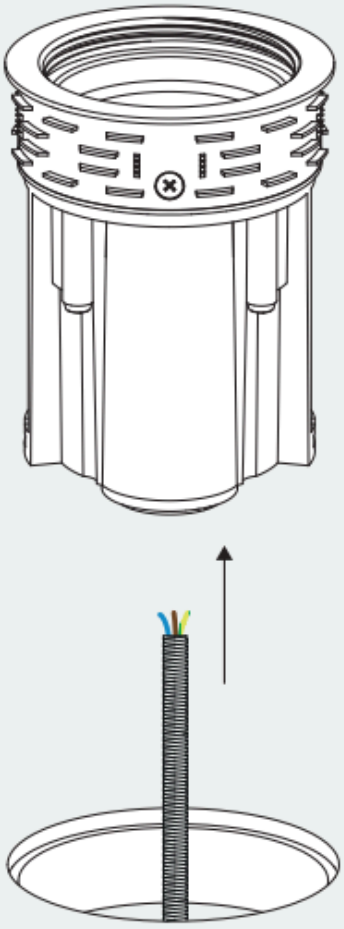

insert preflex in the floor box - cabling through bottom

3

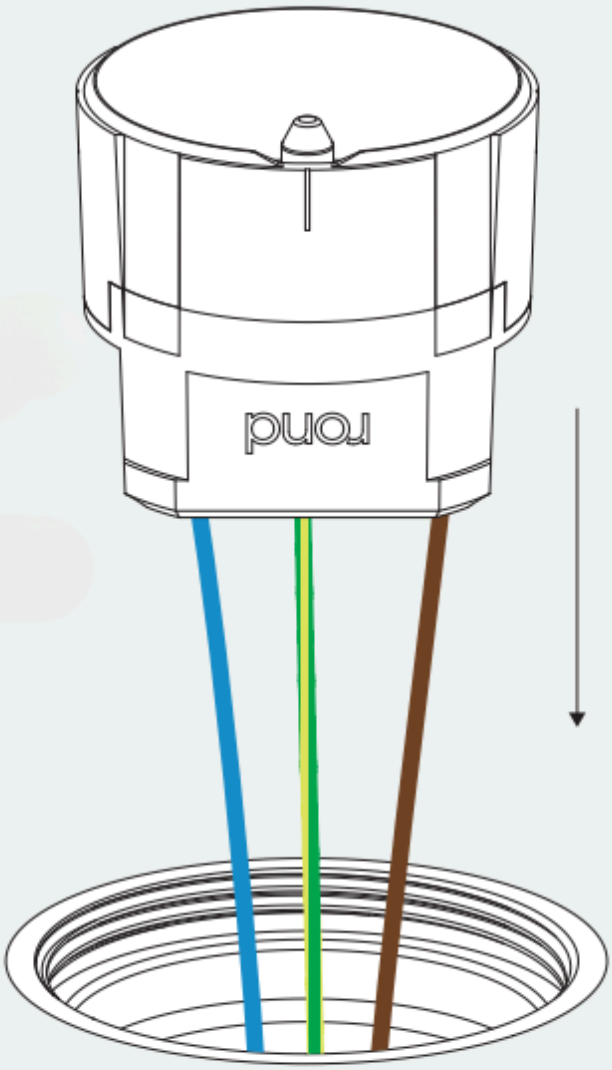

connect the socket (not included) and click it in the holder
compatible with **trimless** retro/easy/backfit type E/F socket modules

4

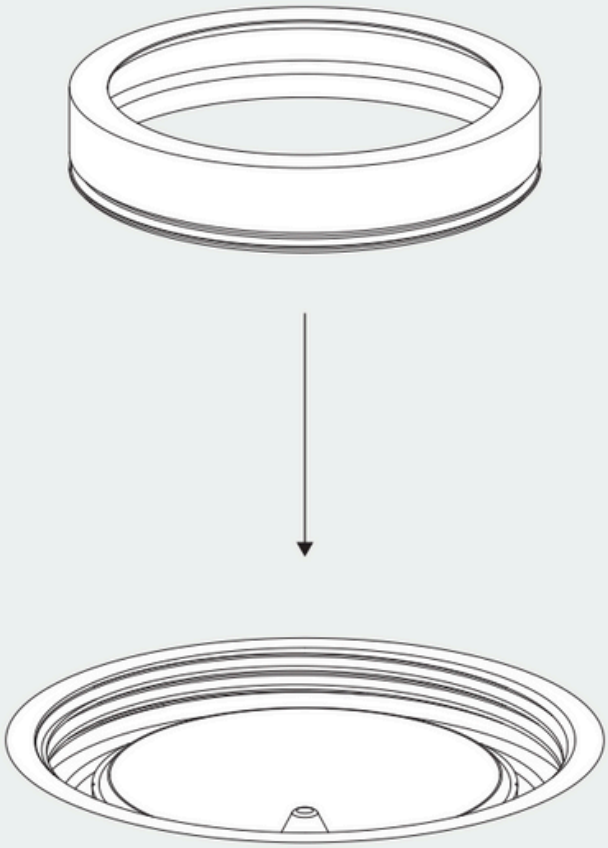

insert the showring

5

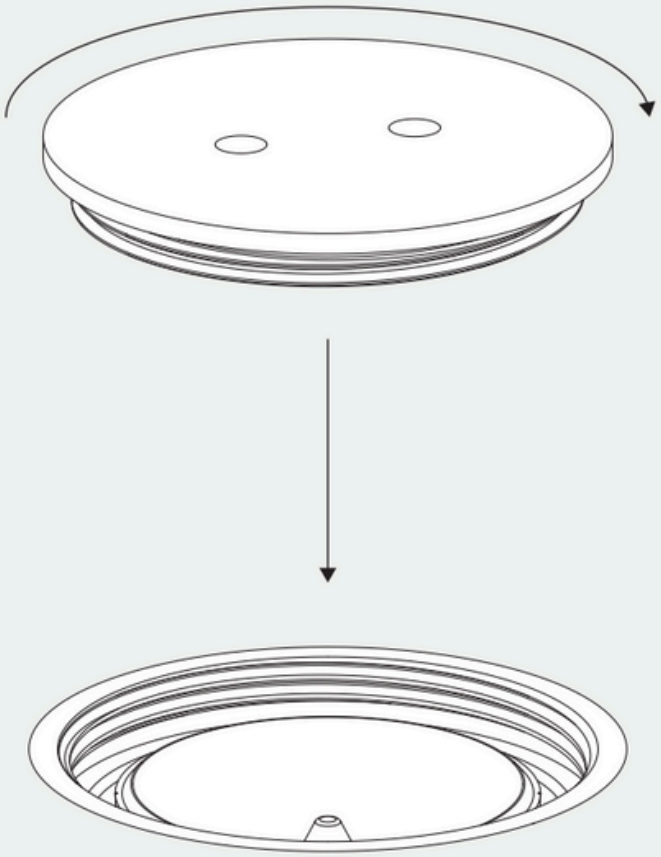

install the cover plate Ø68 of choice (sold separately)

6

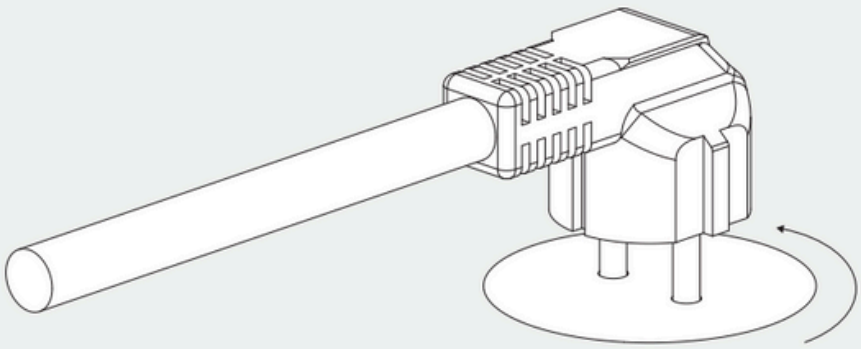

for access remove the cover plate with a plug

thank you for choosing rond



rond × DE Oude SCHAKELAAR

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of if unskilled personnel attempts to repair a product.